Dino Digital Microscope
AM-351

User's Manual

Thank you for choosing Dino Digital Microscope!

We do hope you enjoy using this Dino Digital Microscope – to share, to learn, to explore the miracle of the nature world. You may view the magnified view from pollen to butterfly wings via PC and TV. You can also take picture or video from what you have seen on the computer by using included application software -- DinoCapture. Not only ideal for school, especially the science class, that will have more interaction and sharing between the teacher and students. Also ideal for home, that will bring a different learning experience to parents and children.

Please read this manual carefully before using Dino Digital Microscope.

Contents

Product Specifications 3
Safety Precautions 3
Contents and Name of Parts 4
Connecting to TV Monitor 6
    System Requirement 6
    Connecting Procedure 7
    Operate Dino Microscope 9
Connecting to PC 12
    System Requirements 12
    Driver Installation Procedure 13
        Windows XP 13
        Windows 2000 18
        Windows 98se 21
    Connecting Procedure 27
    Operate Dino Digital Microscope 29
    DinoCapture Application Software 31
        Picture / Video Folder 33
        Menu Function List 36
        Open The Picture 40
        Open The Video Or Time Lapsed Video 41
Using Dino Digital Microscope as PC Camera 42
Q&A 43
Copyright 46
Certification 46
Limited Liability 46

Product Specifications

1. Resolution：640*480 VGA
2. Built-in 3 optical Lens with different magnification power.
3. Magnification power： 10x, 100x~200x, 400x~600x.
4. Built-in oblique and backside LED light.
5. Built-in microphone.
6. Frame rate： up to 30 FPS
7. Interface：USB2.0/1.1 (PC), NTSC or PAL (TV)

Safety Precautions

1. Avoid using or storing the 5V adapter at places exposed to direct sunlight, subject to extremely high temperature or wet.
2. Do not attempt to service this product yourself. Opening the covers may expose you to dangerous voltage points or other risks.
3. When hands are wet, do not plug in or remove the adaptor or other connectors.
4. Using or storing Dino Digital Microscope, do not plug in any other cables, not belong to Dino Digital Microscope.
5. Avoid using or storing Dino Digital Microscope at the environments with high vibration.
6. Do not use any detergent or volatile solution, which will damage the camera case, painted surfaces & Lens. Only use a soft cleaning cloth.
7. If the lens is dirty, please use a kens brush on soft cloth to wipe clean. Avoid touching them with your fingers. Exercise care to avoid scratching the Lens.
8. Do not put heavy things or put pressure on Dino Digital Microscope, especially, on Dino Digital Microscope with rack.
9. Without protection, do not put Dino Digital Microscope outdoor to avoid the lens damaged by high temperature or humidity.
10. Using and storing Dino Digital Microscope at Temp: 0°C~ 40°C, Humidity: 45%~85%.
11. If water has entered Dino Digital Microscope device and the inspection stage, immediately turn the power off and remove the 5V adapter. Do not use dryer neither.

12. Using or storing Dino Digital Microscope, need to watch all cables to avoid trip over or Dino Microscope fall down.
13. To avoid electric shock, remove all electricity source before moving PC or TV.

Contents and Name of Parts

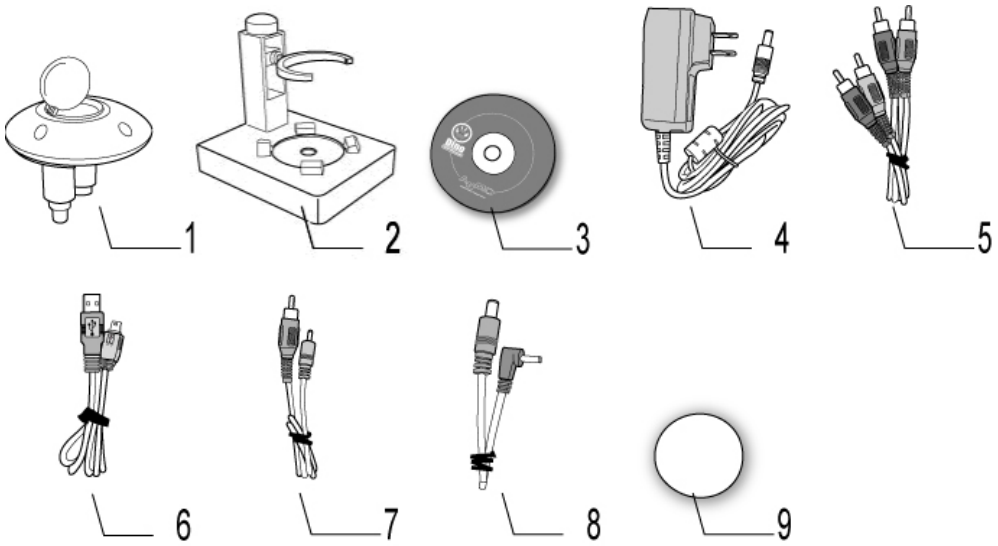

1. Dino Digital Microscope Device
2. Rack
3. CD (user's manual included)
4. 5V AC Adaptor (Input：100V ~ 240V, Output：DC5V)
5. AV Cable《AUDIO + VIDEO》 (2m)
6. USB Cable《USB2.0 / 1.1》 (1.8m)
7. AV to Microphone Jack Cable (2m)
8. DC Cable (30cm)
9. Inspection Plate (Dia.40mm)

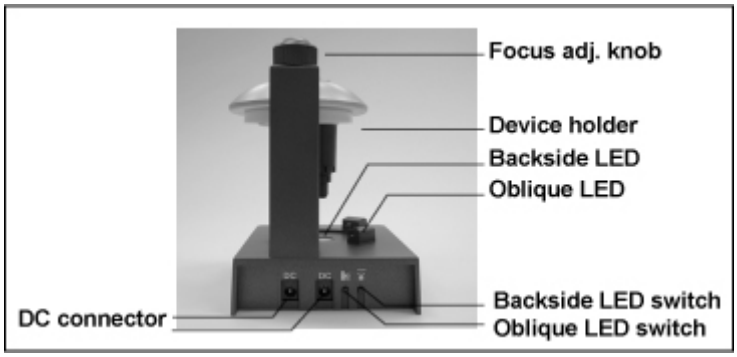

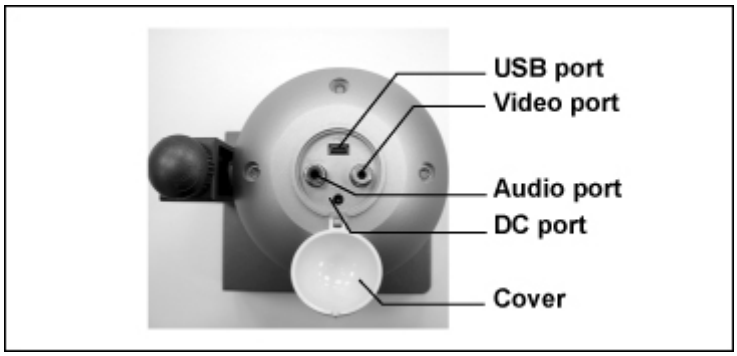

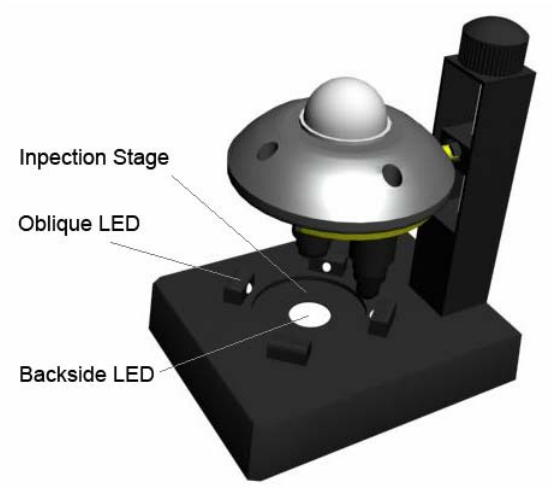

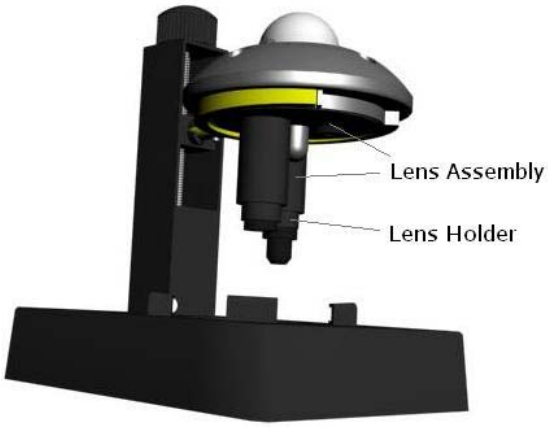

Objective Lens

- Normal Lens: 10x
- Low Power Objective Lens: 100x ~ 200x
- High Power Objective Lens: 400x ~ 600x

Remark: The magnification is subject to the ratio of the object size to be showed on 15” display screen.

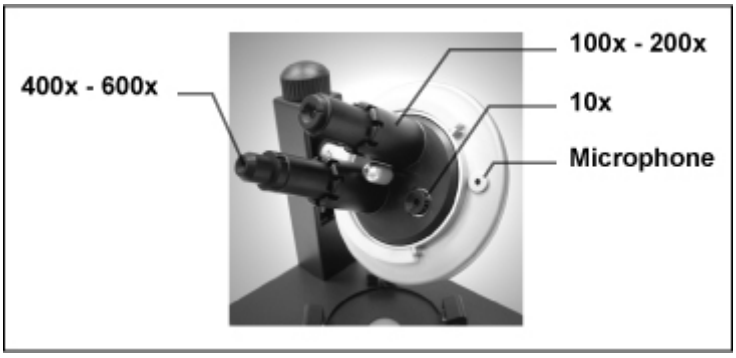

Connecting to TV Monitor

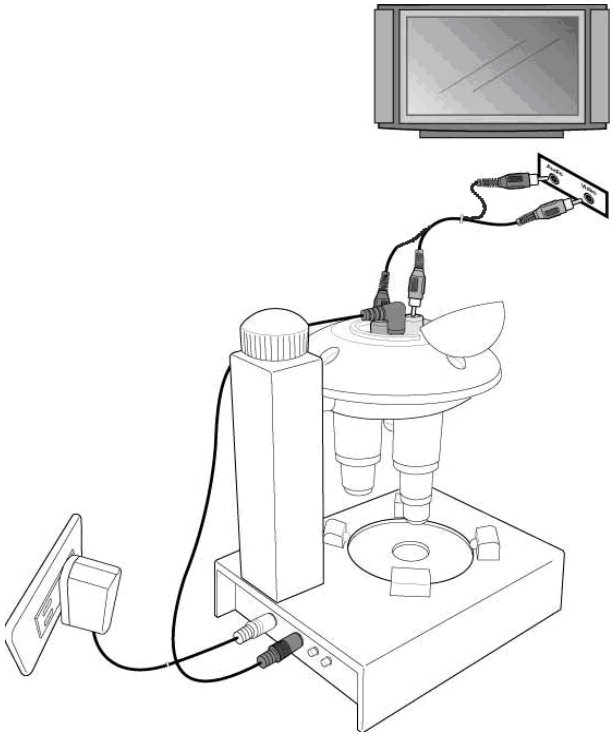

System Requirement

- TV (with AV input function
  Remark: The TV's video format (NTSC or PAL) has to be matched with the video format (NTSC or PAL) of Dino Digital Microscope.
- Device needed: Dino Digital Microscope Device, Rack, 5V AC Adaptor, AV Cable, DC Cable, and Inspection Plate.

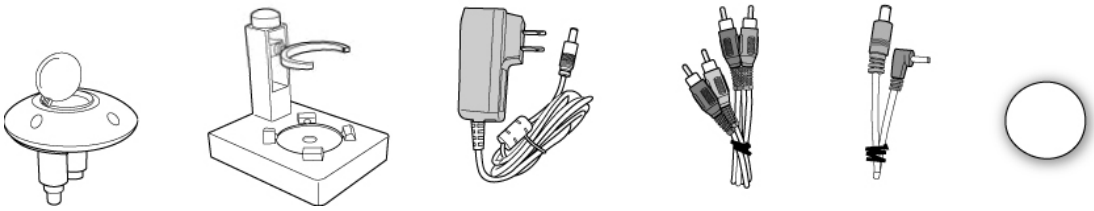

Connecting Procedure

The following procedure will show you how to properly connect Dino Digital Microscope with your TV.

Step.1 There are A, B, C locations on Dino Digital Microscope Device and Device Holder.

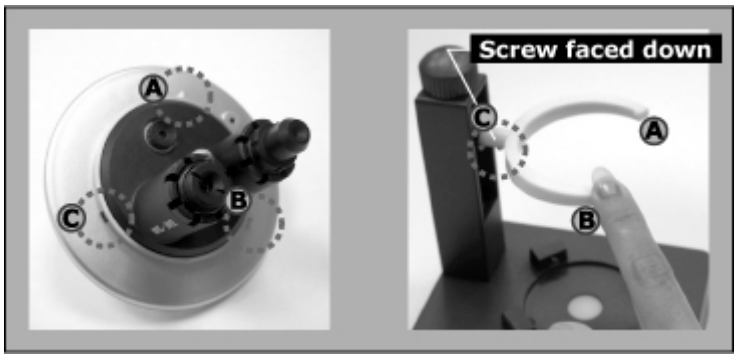

Notice: The device holder's screw has to be faced down, otherwise the digital microscope device will not be able to well fit into the device holder.

Buckle Dino Digital Microscope device's A, B tenons to device holder's A, B locations and Dino Digital Microscope device's C location aims at device holder's C location.

Step.2 Open the device's cover, there are 4 sockets underneath.

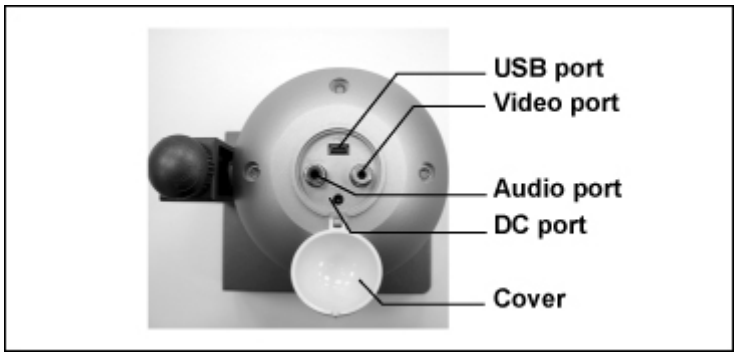

Step.3 Plug the red one of AV cable to the red socket (Audio), and yellow one to the yellow socket (Video) respectively.

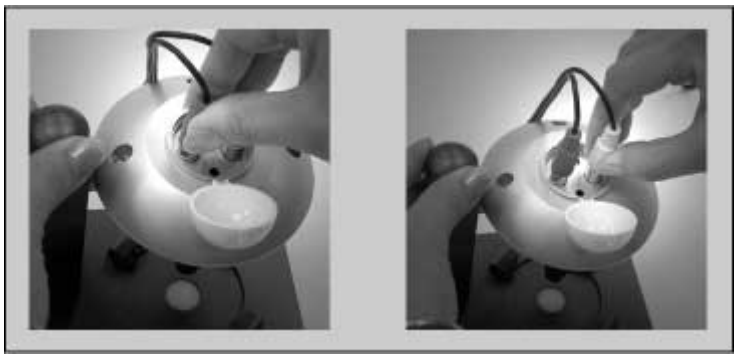

And plug the other end of AV cable to the Video / Audio Input socket on TV monitor.

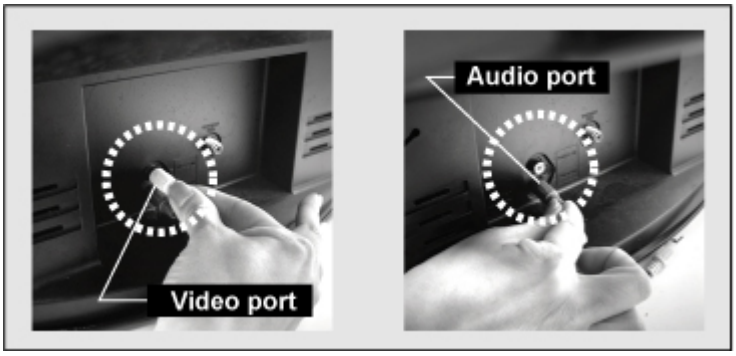

Step.4 Connect DC cable from the mini DC jack on the device to the DC-out socket on the rack base.

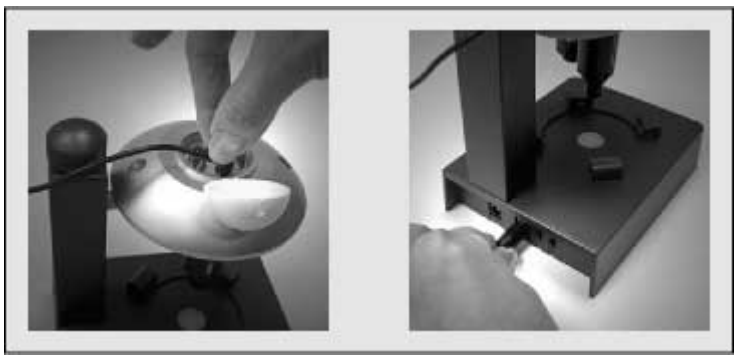

Step.5 Connect the output of the AC adapter to the DC jack on the rack base and plug 5V AC adapter to the power socket of 100~240V AC.

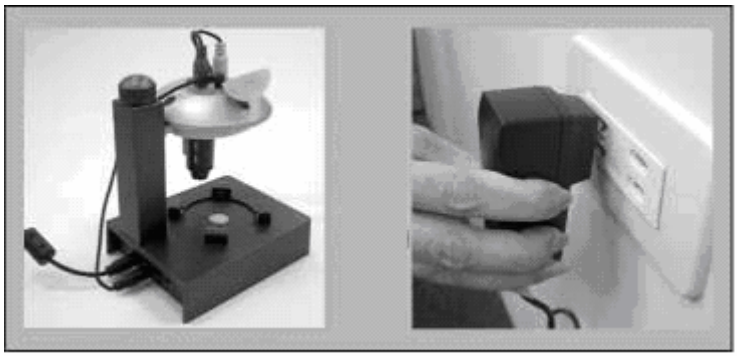

Step.6 Power on TV and select the channel for in-put AV signal.

Operate Dino Microscope

The following procedure will show you how to operate Dino Digital Microscope.

1. To have up-right image, suggest placing Dino Digital Microscope with rack's arm on the left side, as shown.

up-right image position

2. Switch on the LED light with your choice. There are two sets of LED light, backside and oblique, can be switched independently.

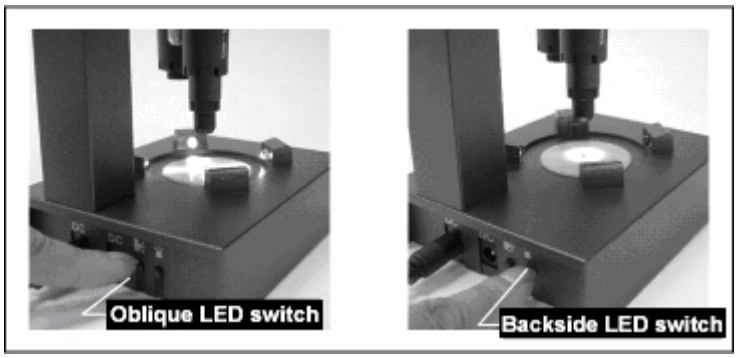

3. Place the inspection plate onto the Inspection Stage, and then put the to-be-observed object near the center position.

4. Select the lens to be used by pulling the Lens Assembly downward and rotating it until feeling another click. The lens right above the center of Inspection Stage is the one chosen.
   It is suggested to hold the Device by another hand while rotating the Lens Assembly.

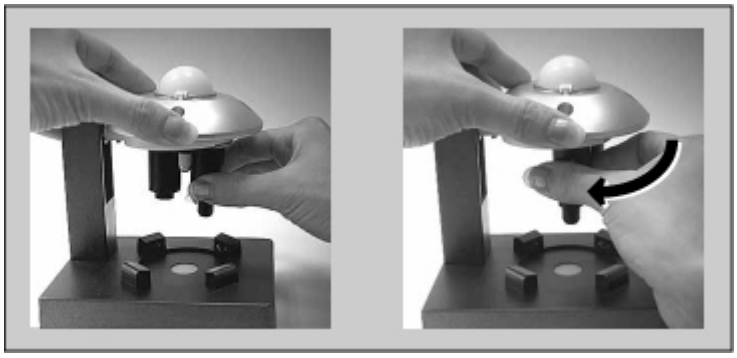

5. The other way to adjust magnification power is to adjust the Lens Holder's length by pulling the Lens Holder downward or upward. The Lens Holder is pulling downward, the magnification is higher. Adjust the Focus Adjustment Knob until the image became clear at the location you are interested with. It is suggested to hold the Lens Holder's top by another hand while pulling the Lens Holder downward or upward.

Remark: Before changing the lens, it is suggested to heighten the lens position by pushing the Lens Holder back toward the original position, for preventing the lens contacting with LED sockets.

6. To adjust the focus, rotate the Focus Adjustment Knob until the clearest image is obtained on TV screen.

7. When using microphone, it's not necessary to turn the microphone toward the user.

Remark: If TV's format is PAL, there will be a black bar on TV screen top as shown.

Connecting to PC

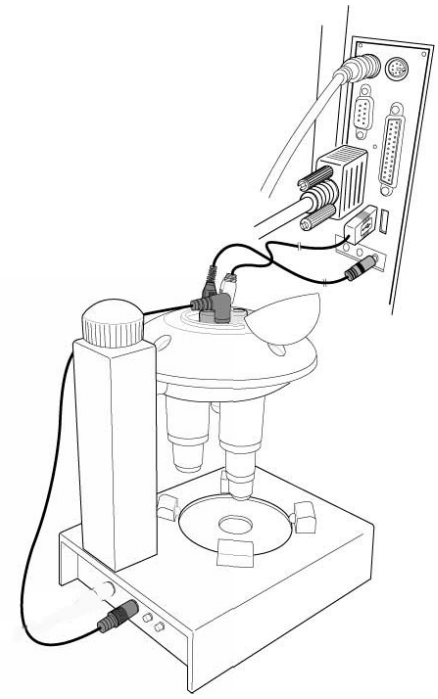

System Requirements

- PC's system requirements:
  - ✓ OS: Windows 98se, 2000, XP
  - ✓ CPU: Pentium IV 1.5G, Celeron, AMD Athlon or above
  - ✓ Memory: 128MB
  - ✓ HDD storage space: at least 150MB
    (for driver and application software installation)

- ✓ Graphic card: 16-bit or above
- ✓ CD-ROM driver
- ✓ Sound card and speaker
- ✓ USB2.0 / 1.1 port (to have better image, USB2.0 is recommended)

- Device needed: Dino Digital Microscope Device, Rack, CD-ROM, 5V AC Adaptor, USB Cable, AV to Microphone Jack Cable, Inspection Plate.

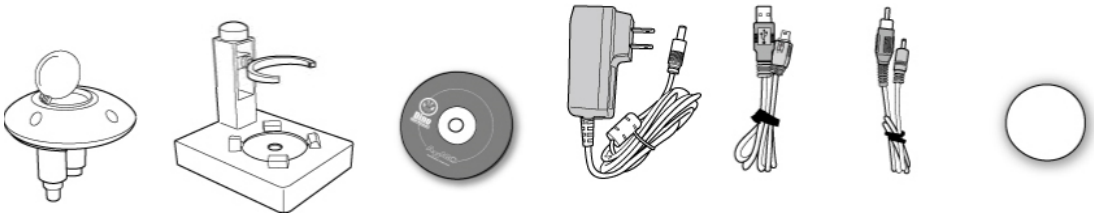

Driver Installation Procedure

■ Power on PC and place installation CD into CD-ROM driver, do not connect USB Cable from Dino Digital Microscope to PC before driver installation.

■ Select driver installation, and follow the instructions to complete installation.

■ As driver installation completed, and if system asking for re-start, please re-start the Windows OS.

Note: The driver needs to be installed only once for each computer.

Windows XP

1. Place the installation CD into CD-ROM driver, the installation program should be started automatically. Otherwise, please execute the AUTORUN.EXE directly from the CD.
2. Select "Driver Installation" from Dino digital Microscope Installation menu screen as shown.

3. Click "Next" to continue, as shown.

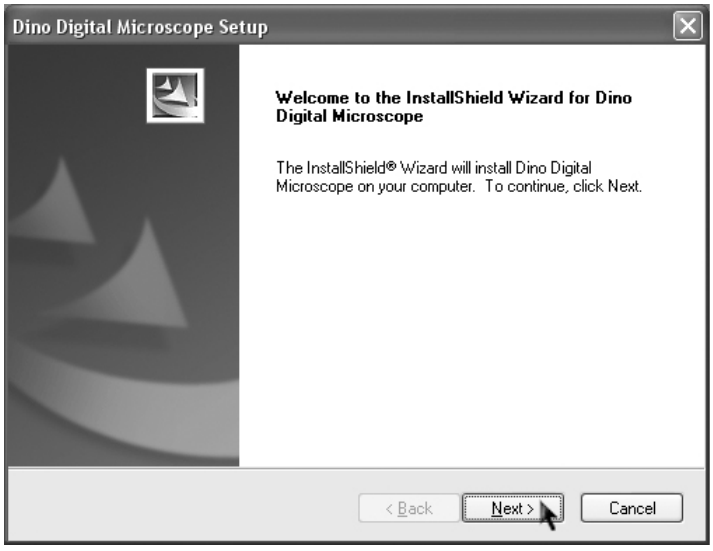
Dino Digital Microscope Setup
Welcome to the InstallShield Wizard for Dino Digital Microscope
The InstallShield® Wizard will install Dino Digital Microscope on your computer. To continue, click Next.
< Back
Next >
Cancel

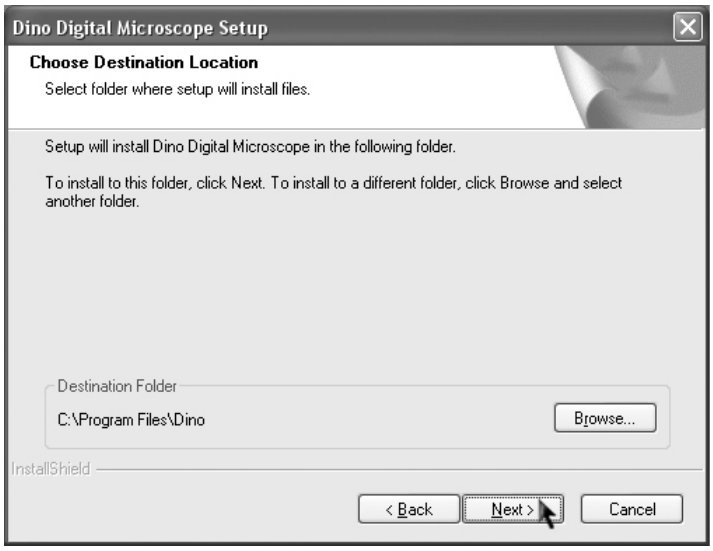
Dino Digital Microscope Setup
Choose Destination Location
Select folder where setup will install files.
Setup will install Dino Digital Microscope in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\Program Files\Dino
Browse...
InstallShield
< Back
Next >
Cancel

Dino Digital Microscope Setup
Start Copying Files
Review settings before copying files.
Setup has enough information to start copying the program files. If you want to review or change any settings, click Back. If you are satisfied with the settings, click Next to begin copying files.
Current Settings:
Target Directory:
C:\Program Files\Dino
Program Folder:
Dino Digital Microscope
InstallShield
< Back
Next >
Cancel

4. When the "Software Installation" warning message appears, click "Continue Anyway".

Software Installation
The software you are installing has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the software vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

5. Click "Finish" to complete the installation.

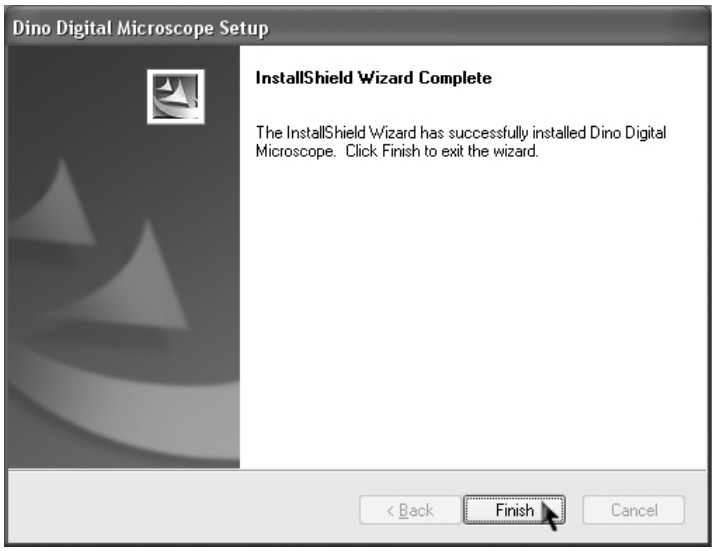
Dino Digital Microscope Setup
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed Dino Digital Microscope. Click Finish to exit the wizard.
< Back
Finish
Cancel

6. Plug USB Cable to Dino Digital Microscope to connect with PC, a "Found New Hardware Wizard" will then appear. Click "Next" to continue.

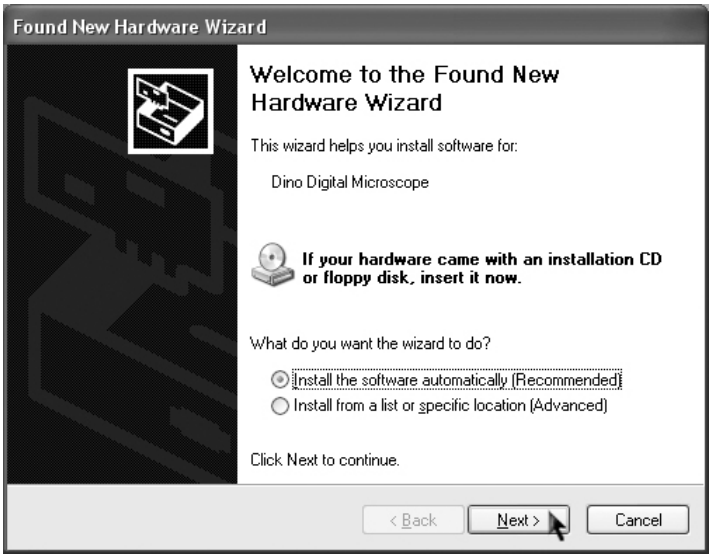
Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
This wizard helps you install software for:
Dino Digital Microscope
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

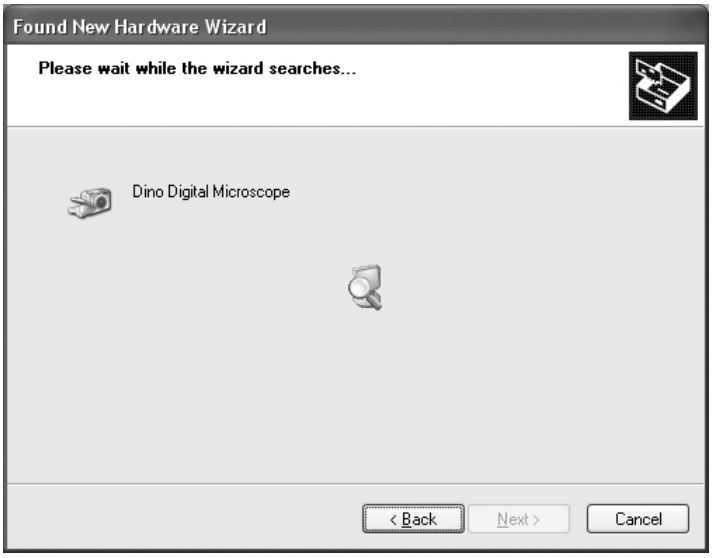

Hardware Installation
The software you are installing for this hardware:
Dino Digital Microscope
has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

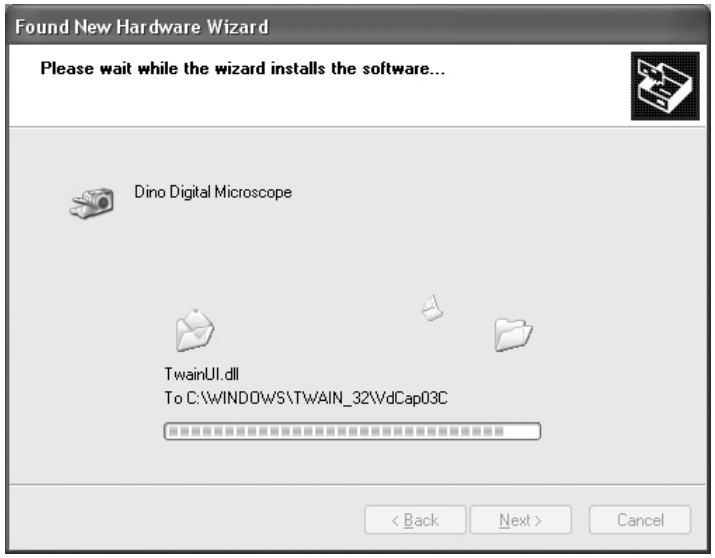
Found New Hardware Wizard
Please wait while the wizard installs the software...
Dino Digital Microscope
TwainUI.dll
To C:\WINDOWS\TWAIN_32\VdCap03C
< Back
Next >
Cancel

Found New Hardware Wizard
Completing the Found New Hardware Wizard
The wizard has finished installing the software for:
Dino Digital Microscope
Click Finish to close the wizard.
< Back
Finish
Cancel

Windows 2000

1. Place the installation CD into CD-ROM driver, the installation program should be started automatically. Otherwise, please execute the AUTORUN.EXE directly from the CD.
2. Select "Driver Installation" from Dino digital Microscope Installation menu screen as shown.

3. Click "Next" to continue, as shown.

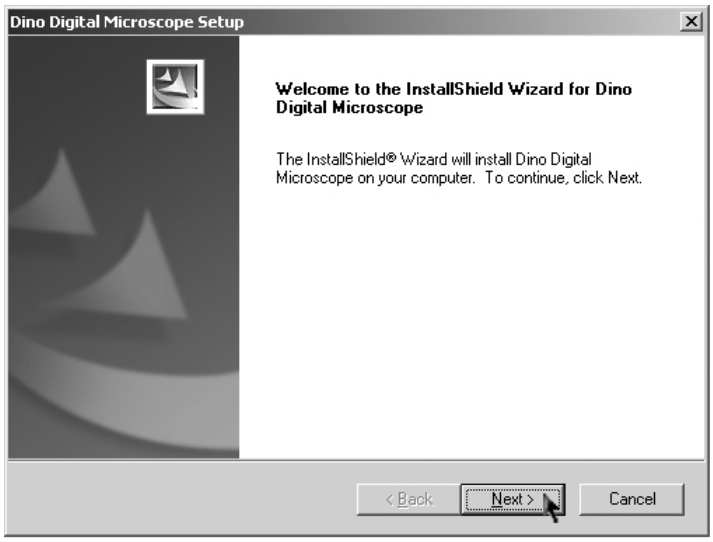
Dino Digital Microscope Setup
Welcome to the InstallShield Wizard for Dino Digital Microscope
The InstallShield® Wizard will install Dino Digital Microscope on your computer. To continue, click Next.
< Back
Next >
Cancel

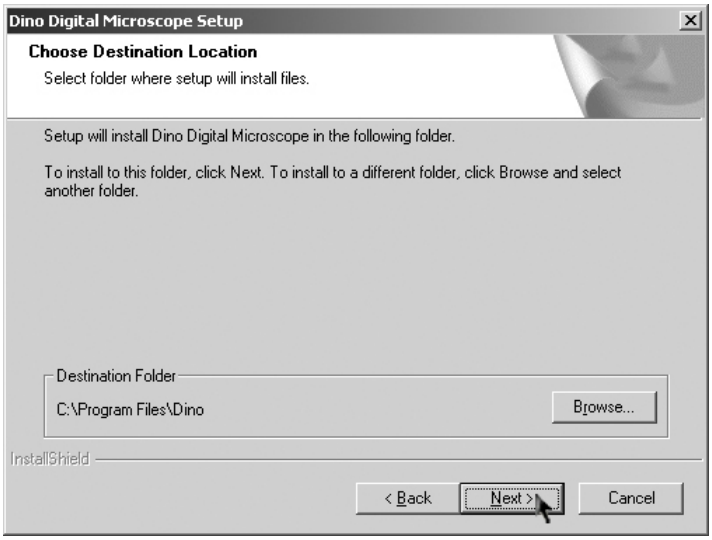
Dino Digital Microscope Setup
Choose Destination Location
Select folder where setup will install files.
Setup will install Dino Digital Microscope in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\Program Files\Dino
Browse...
InstallShield
< Back
Next >
Cancel

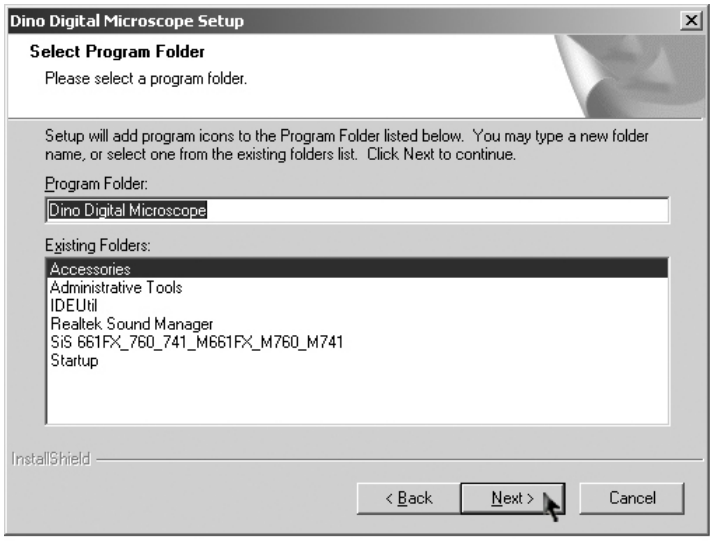
Dino Digital Microscope Setup
Select Program Folder
Please select a program folder.
Setup will add program icons to the Program Folder listed below. You may type a new folder name, or select one from the existing folders list. Click Next to continue.
Program Folder:
Dino Digital Microscope
Existing Folders:
Accessories
Administrative Tools
IDEUtil
Realtek Sound Manager
SiS 661FX_760_741_M661FX_M760_M741
Startup
InstallShield
< Back
Next >
Cancel

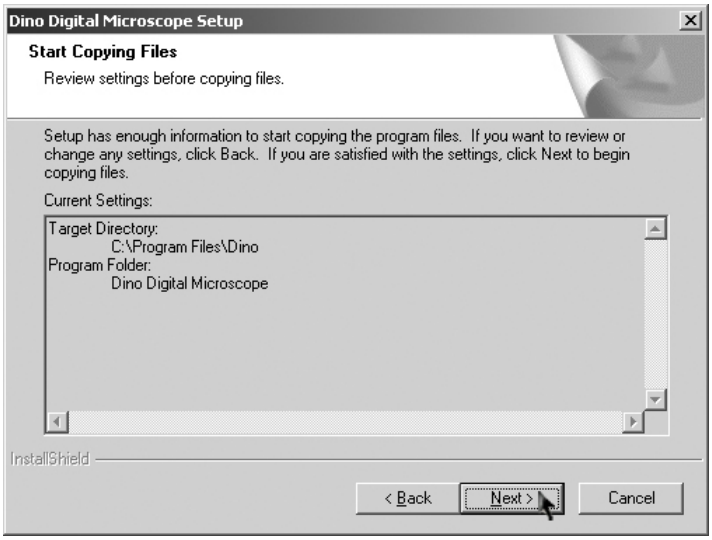
Dino Digital Microscope Setup
Start Copying Files
Review settings before copying files.
Setup has enough information to start copying the program files. If you want to review or change any settings, click Back. If you are satisfied with the settings, click Next to begin copying files.
Current Settings:
Target Directory:
C:\Program Files\Dino
Program Folder:
Dino Digital Microscope
InstallShield
< Back
Next >
Cancel

4. When the "Digital Signature Not Found" warning message appears, click "Yes" to continue the installation.

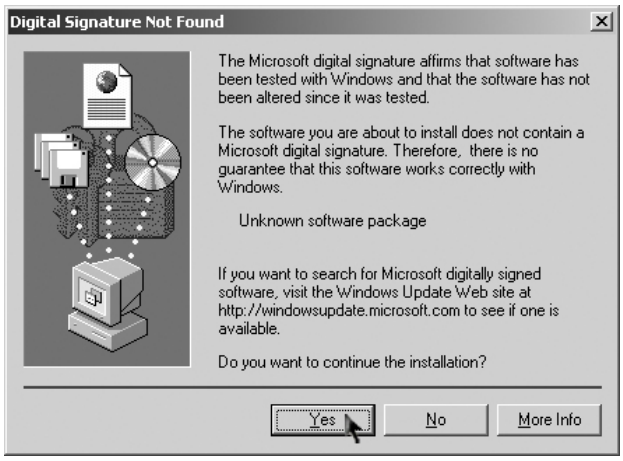
Digital Signature Not Found
The Microsoft digital signature affirms that software has been tested with Windows and that the software has not been altered since it was tested.
The software you are about to install does not contain a Microsoft digital signature. Therefore, there is no guarantee that this software works correctly with Windows.
Unknown software package
If you want to search for Microsoft digitally signed software, visit the Windows Update Web site at http://windowsupdate.microsoft.com to see if one is available.
Do you want to continue the installation?
Yes
No
More Info

5. Click "Finish" to complete the installation.

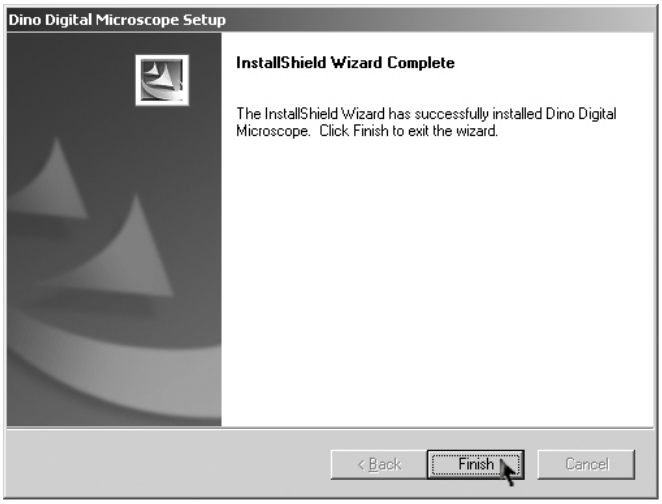
Dino Digital Microscope Setup
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed Dino Digital Microscope. Click Finish to exit the wizard.
< Back
Finish
Cancel

6. Plug USB Cable to Dino Digital Microscope to connect with PC

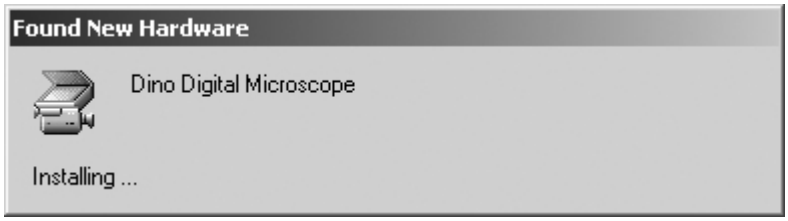

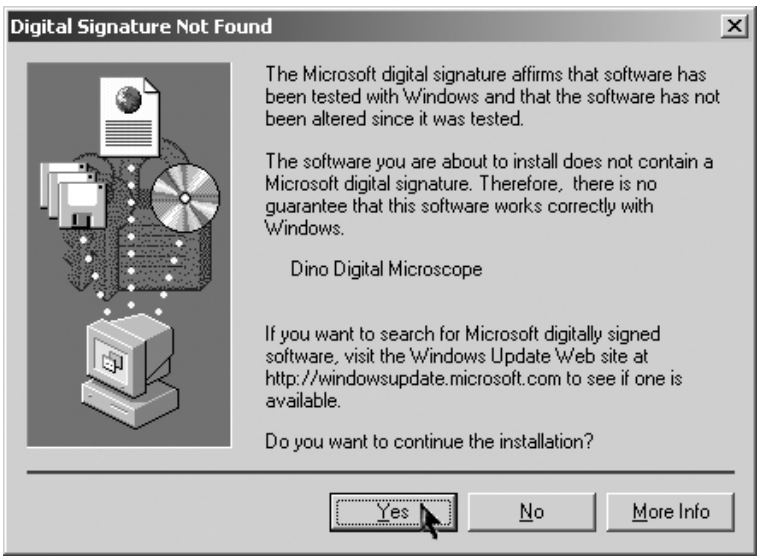
Digital Signature Not Found
The Microsoft digital signature affirms that software has been tested with Windows and that the software has not been altered since it was tested.
The software you are about to install does not contain a Microsoft digital signature. Therefore, there is no guarantee that this software works correctly with Windows.
Dino Digital Microscope
If you want to search for Microsoft digitally signed software, visit the Windows Update Web site at http://windowsupdate.microsoft.com to see if one is available.
Do you want to continue the installation?
Yes
No
More Info

Windows 98se

1. Place the installation CD into CD-ROM driver, the installation program should be started automatically. Otherwise, please execute the AUTORUN.EXE directly from the CD.
2. Select "Driver Installation" from Dino digital Microscope Installation menu screen as shown.

3. Click “Next” to continue, as shown.

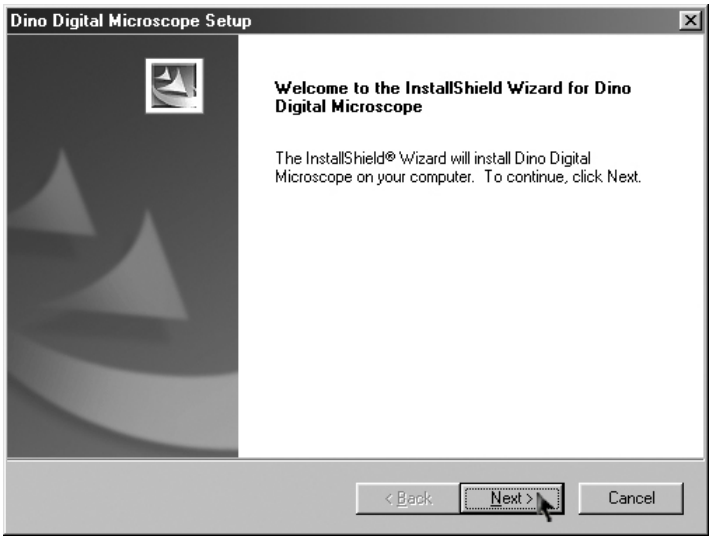
Dino Digital Microscope Setup
Welcome to the InstallShield Wizard for Dino Digital Microscope
The InstallShield® Wizard will install Dino Digital Microscope on your computer. To continue, click Next.
< Back
Next >
Cancel

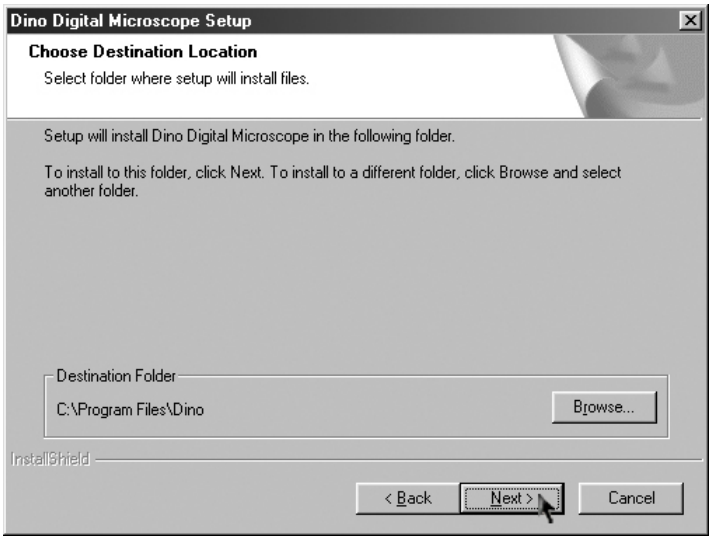
Dino Digital Microscope Setup
Choose Destination Location
Select folder where setup will install files.
Setup will install Dino Digital Microscope in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\Program Files\Dino
Browse...
InstallShield
< Back
Next >
Cancel

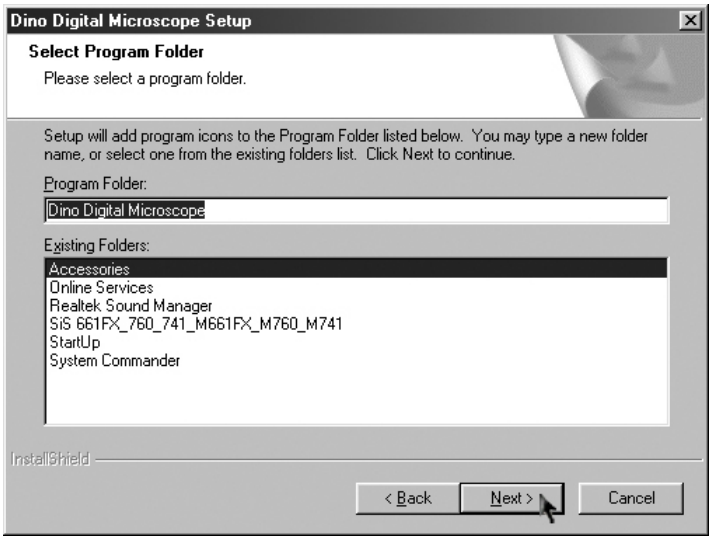
Dino Digital Microscope Setup
Select Program Folder
Please select a program folder.
Setup will add program icons to the Program Folder listed below. You may type a new folder name, or select one from the existing folders list. Click Next to continue.
Program Folder:
Dino Digital Microscope
Existing Folders:
Accessories
Online Services
Realtek Sound Manager
SiS 661FX_760_741_M661FX_M760_M741
StartUp
System Commander
InstallShield
< Back
Next >
Cancel

Dino Digital Microscope Setup
Start Copying Files
Review settings before copying files.
Setup has enough information to start copying the program files. If you want to review or change any settings, click Back. If you are satisfied with the settings, click Next to begin copying files.
Current Settings:
Target Directory:
C:\Program Files\Dino
Program Folder:
Dino Digital Microscope
InstallShield
< Back
Next >
Cancel

4. Click "Finish" to complete the installation.

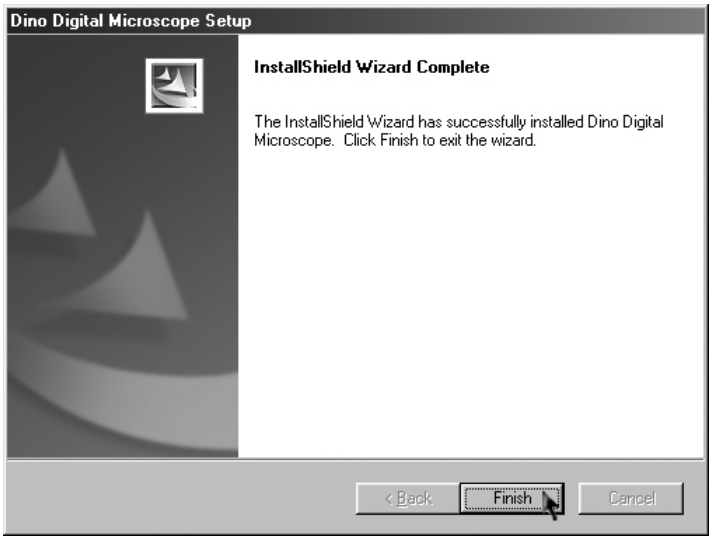
Dino Digital Microscope Setup
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed Dino Digital Microscope. Click Finish to exit the wizard.
< Back
Finish
Cancel

5. Plug USB Cable to Dino Digital Microscope to connect with PC

Add New Hardware Wizard
This wizard searches for new drivers for:
Dino Digital Microscope
A device driver is a software program that makes a hardware device work.
< Back
Next >
Cancel

Add New Hardware Wizard
What do you want Windows to do?
Search for the best driver for your device. (Recommended).
Display a list of all the drivers in a specific location, so you can select the driver you want.
< Back
Next >
Cancel

Add New Hardware Wizard
Windows will search for new drivers in its driver database on your hard drive, and in any of the following selected locations. Click Next to start the search.
Floppy disk drives
CD-ROM drive
Microsoft Windows Update
Specify a location:
D:\nvdrv\win98se&me
Brow
< Back
Next >
Cancel

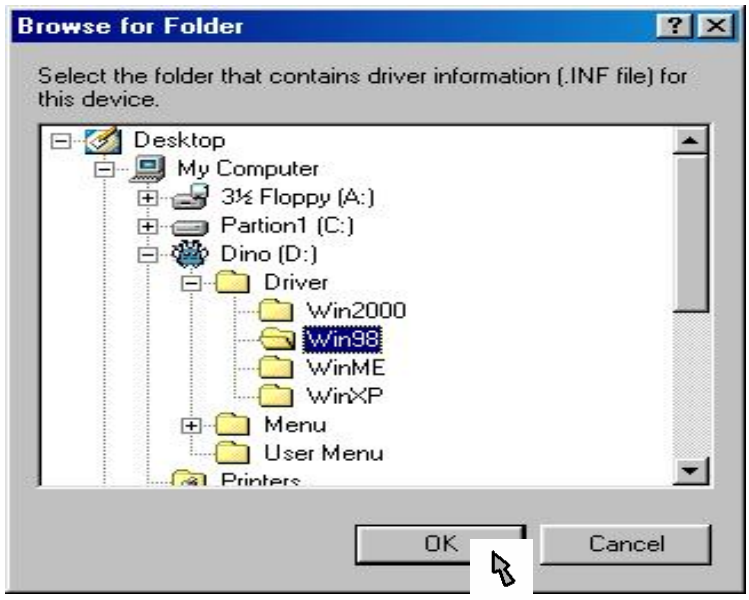
Browse for Folder
Select the folder that contains driver information (.INF file) for this device.
Desktop
My Computer
3½ Floppy (A:)
Partion1 (C:)
Dino (D:)
Driver
Win2000
Win98
WinME
WinXP
Menu
User Menu
Printers
OK
Cancel

Add New Hardware Wizard
Windows will search for new drivers in its driver database on your hard drive, and in any of the following selected locations. Click Next to start the search.
Floppy disk drives
CD-ROM drive
Microsoft Windows Update
Specify a location:
D:\Driver\Win98
Browse...
< Back
Next >
Cancel

Add New Hardware Wizard
Windows driver file search for the device:
Dino Digital Microscope
Windows is now ready to install the best driver for this device. Click Back to select a different driver, or click Next to continue.
Location of driver:
E:\DRIVER\WIN98\CVDNON9X.INF
< Back
Next >
Cancel

6. When the following message appears, please insert the Windows 98 Second Edition CD-ROM.

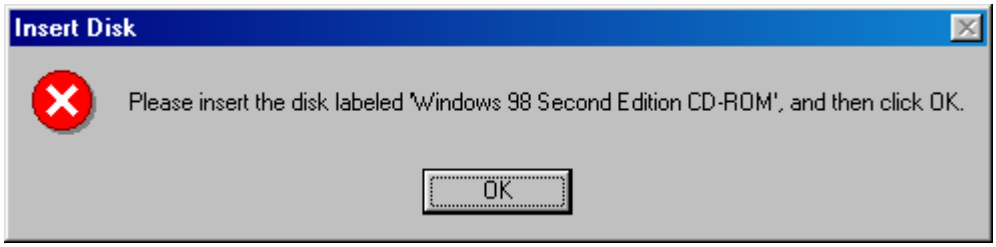

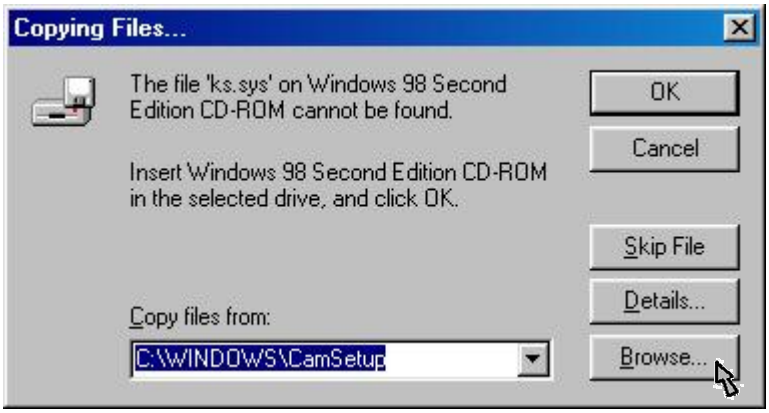
Copying Files...
The file 'ks.sys' on Windows 98 Second Edition CD-ROM cannot be found.
Insert Windows 98 Second Edition CD-ROM in the selected drive, and click OK.
Copy files from:
C:\WINDOWS\CamSetup
OK
Cancel
Skip File
Details...
Browse...

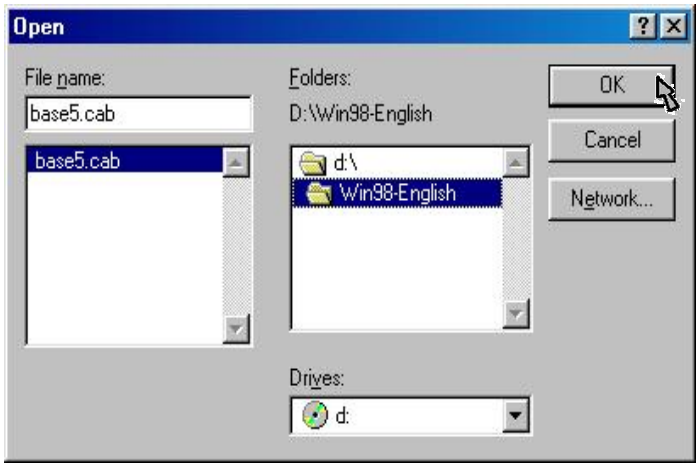
Open
File name:
base5.cab
base5.cab
Folders:
D:\Win98-English
d:\
Win98-English
Drives:
d:
OK
Cancel
Network...

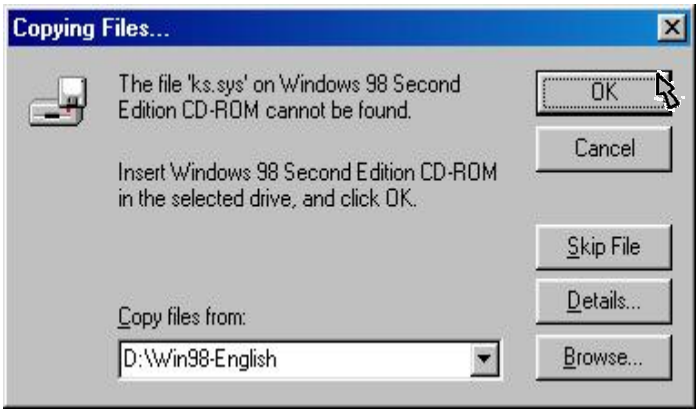
Copying Files...
The file 'ks.sys' on Windows 98 Second Edition CD-ROM cannot be found.
Insert Windows 98 Second Edition CD-ROM in the selected drive, and click OK.
Copy files from:
D:\Win98-English
OK
Cancel
Skip File
Details...
Browse...

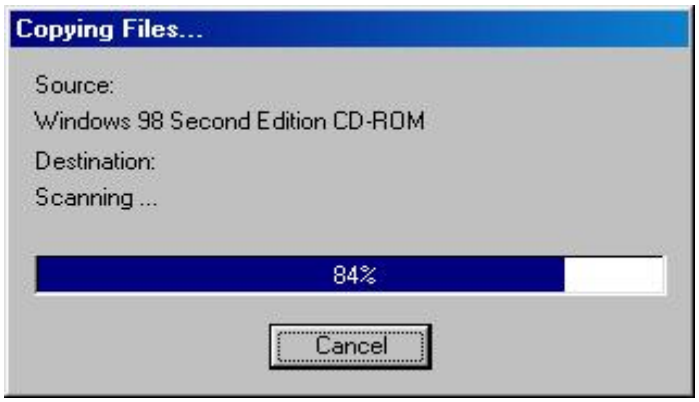
Copying Files...
Source:
Windows 98 Second Edition CD-ROM
Destination:
Scanning ...
84%
Cancel

Connecting Procedure

The following procedure will show you how to properly connect Dino Digital Microscope with your PC.

Step.1 There are A, B, C locations on Dino Digital Microscope Device and Device Holder.

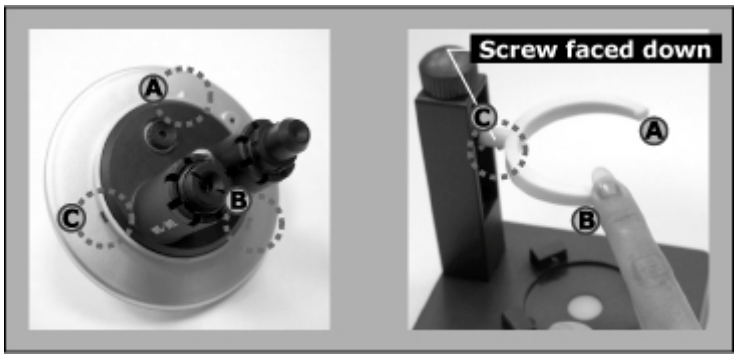

Notice: The device holder's screw has to be faced down, otherwise the digital microscope device will not be able to well fit into the device holder.

Buckle Dino Digital Microscope device's A, B tenons to device holder's A, B locations and Dino Digital Microscope device's C location aims at device holder's C location.

Step.2 Open the device's cover, there are 4 sockets underneath.

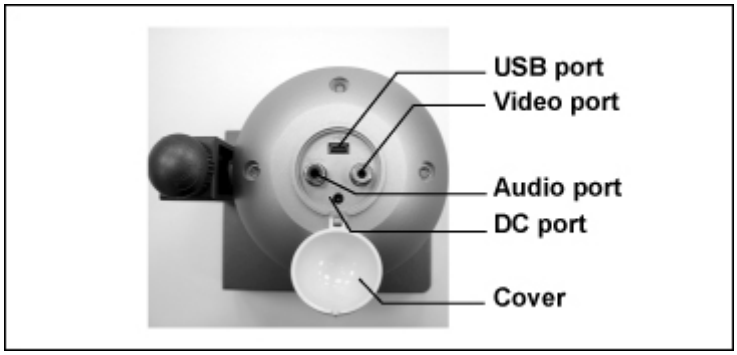

Step.3 Connect USB Cable to the mini USB socket on Microscope Device and the other end to PC USB port.

Step.4 Connect AV to Microphone Jack Cable to the red Audio socket on Microscope Device and to the microphone jack of sound card on PC.

Step.5 Connect DC cable from the mini DC jack on the device to the DC-out socket on the rack base.

Operate Dino Digital Microscope

The following procedure will show you how to operate Dino Digital Microscope.

1. To have up-right image, suggest placing Dino Digital Microscope with rack's arm on the left side, as shown.

up-right image position

2. Switch on the LED light with your choice. There are two sets of LED light, backside and oblique, can be switched independently.

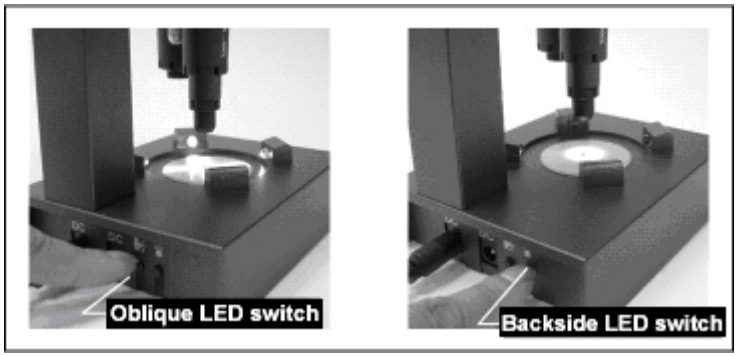

3. Place the inspection plate onto the Inspection Stage, and then put the to-be-observed object near the center position.

4. Select the lens to be used by pulling the Lens Assembly downward and rotating it until feeling another click. The lens right above the center of Inspection Stage is the one chosen.
   It is suggested to hole the Device by another hand while rotating the Lens Assembly.

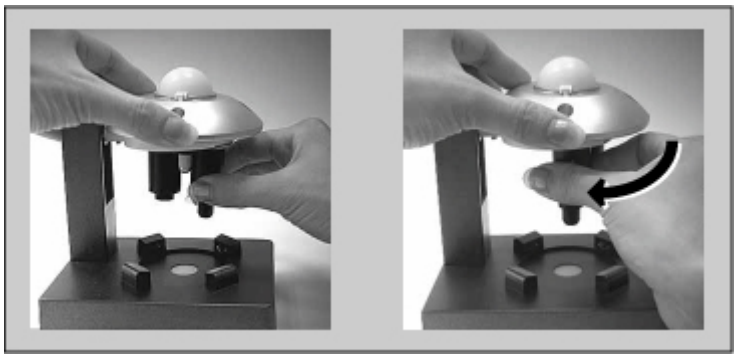

5. The other way to adjust magnification power is to adjust the Lens Holder's length by pulling the Lens Holder downward or upward. The Lens Holder is pulling downward, the magnification is higher. Adjust the Focus Adjustment Knob until the image became clear at the location you are interested with.
   It is suggested to hold the Lens Holder's top by another hand while pulling the Lens Holder downward or upward.

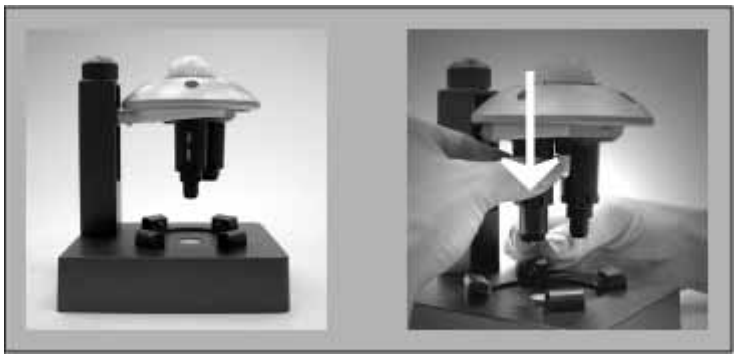

Remark: Before changing the lens, it is suggested to heighten the lens position by pushing the Lens Holder back toward the original position, for preventing the lens contacting with LED sockets.

6. To adjust the focus, rotate the Focus Adjustment Knob until the clearest image is obtained on PC screen.

Remark: Can also use Video Setting function of DinoCapture for image adjustment. (Please refer to page 38)

7. When using microphone, it's not necessary to turn the microphone toward the user.

Remark: Connect to notebook, be sure to mark "mute" for notebook microphone to avoid interrupting Dino Digital Microscope's microphone.

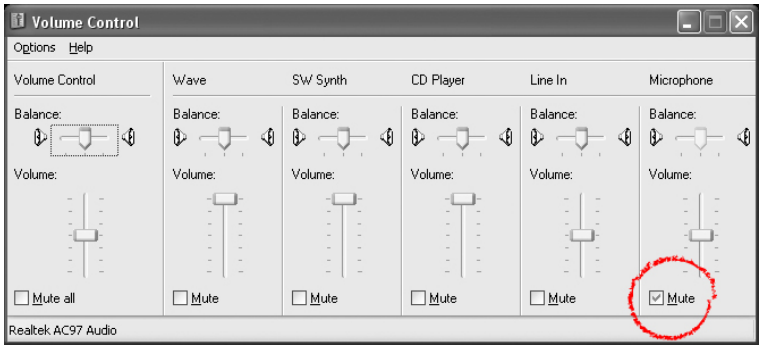

DinoCapture Application Software

Note: Before start DinoCapture, please make sure Dino Digital Microscope has been connected to PC via USB.

Click DinoCapture, the DinoCapture main screen will be shown as below.

The right hand side display the real-time image under the microscope. If Dino Digital Microscope has not been found while opening the DinoCapture, the message will be prompted as below.

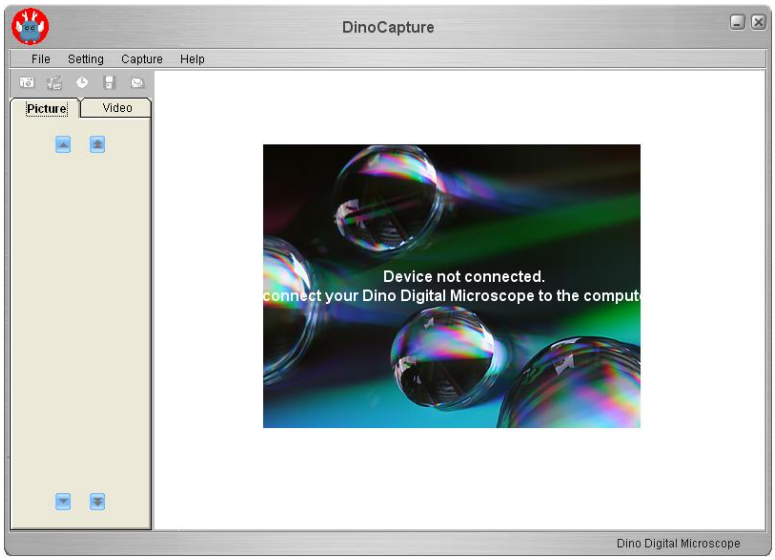

Tool Bar Description

Take Picture

Take Video

Take Time Lapsed Video

Save as

Mail

Picture / Video Folder

Picture / Video folder is on the left side of the program, which contains the thumbnails of picture or video captured by the program.
The file in the folder will not be automatically deleted when leaving the program. But it is still suggested to save the picture or video and keep the folder clean for file security and program's performance concern.

Thumbnail Notation

Grey shadow -- The picture or video has not yet been saved.

Orange shadow -- The picture or video has been saved.

Blue frame –- The picture or video is selected.
The selected picture or video can thus be opened, be saved, be copied , be shared, be mailed or be deleted.

Take Picture

The picture can be taken either by clicking the icon on Tool Bar or by selecting "Picture" under Capture Menu.

Take Video

The Video can be taken either by clicking the icon on Tool Bar or by selecting "Video" under Capture Menu.

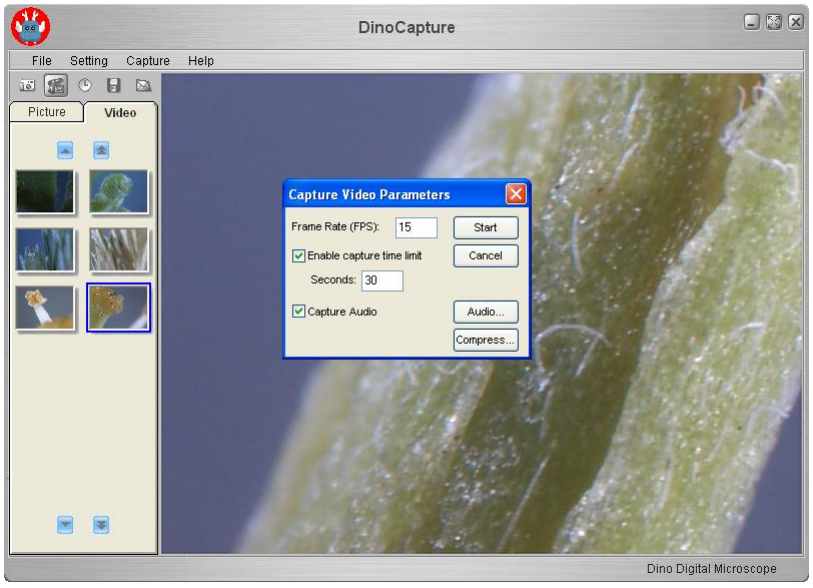

Take Time Lapsed Video

The Time Lapsed Video can be taken either by clicking the icon on Tool Bar or by selecting "Frames" under Capture Menu.

DinoCapture
File Setting Capture Help
Picture Video
Capture Time Lapsed Video
Start Time : 2005 / 9 / 1
23 : 5 : 54
Interval : 0 Min 1 Sec
Total Frames : 30
Est.File Size : 27 MB
End Time :
Had Captured : 0 Frames
Start Insert Cancel
Dino Digital Microscope

Save Picture or Video

The file can be saved as "jpg" or "bmp", by either clicking in the Tool Bar or by selecting "Save as" under the File Menu . The selected file in the folder will then be saved as prompted below.

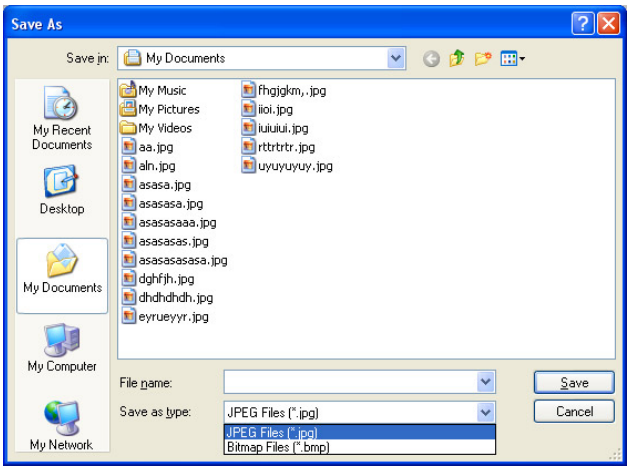

Mail

Click "Mail" : The file name is same as system's.

The selected file can be mailed by clicking in the Tool Bar, or by selecting "Mail" under the File Menu.

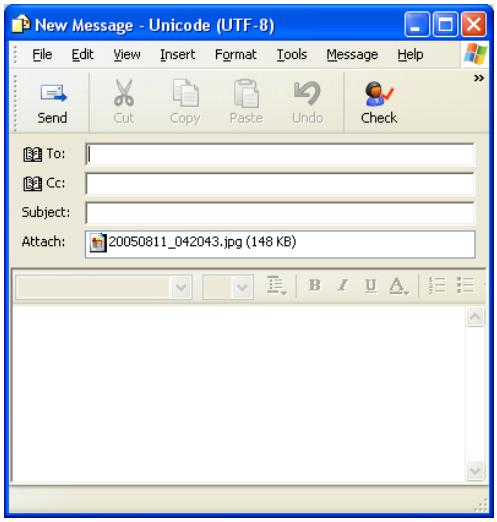

Share

Click "share" in the File Menu.

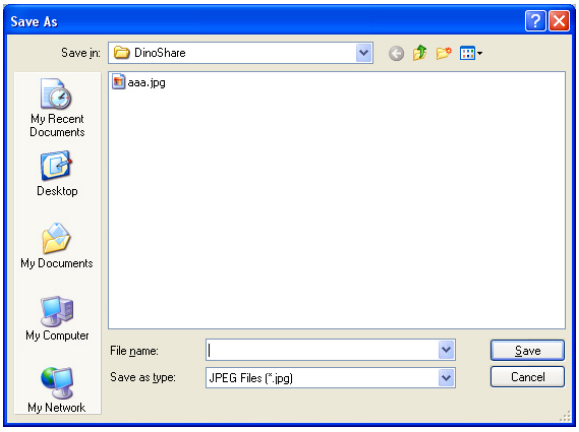

Full Screen Display:

The real time display can be enlarged to full screen by clicking on the upper right corner of the window.

To return from full screen mode, please click "**Esc**".

Menu Function List

1. File Menu

Open -- To open the selected picture or video.

Save As -- To save the selected picture or video.

Share -- Save the picture or video file to DinoShare folder, under the Shared Document.

Mail -- To mail the selected picture or video.
The picture will be mailed in JPG format automatically.

Delete -- To delete the selected picture or video.

Delete All – To delete all the files in selected folder, picture or video.

On display thumbnail picture, click mouse right key, the functions showed are same as file's.

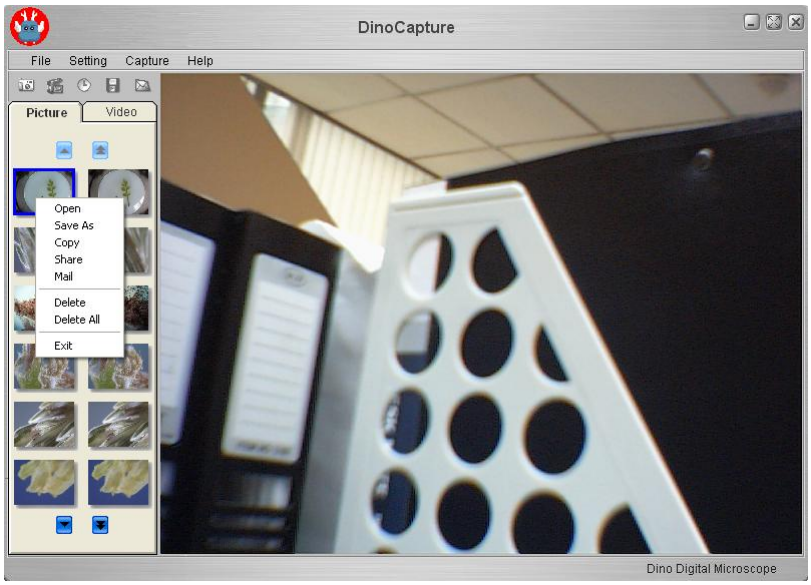

2. Setting

Audio Setting

The user can select the quality of audio file to be recorded.

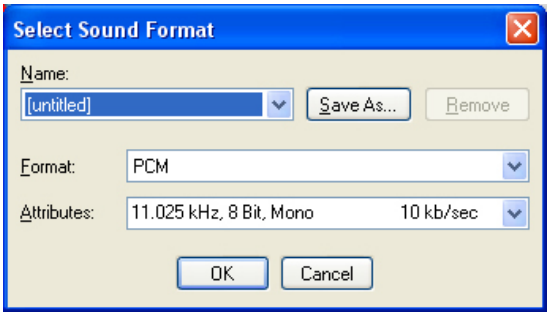

Video Setting

The user can set the parameter of video.

Note: The resolution setting is not useful.

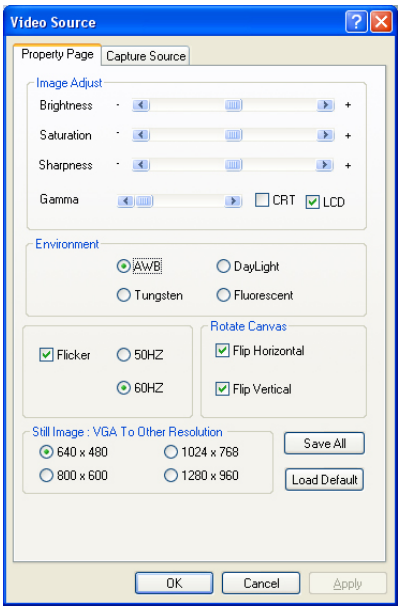

Video Compression Setting

The user can select the compressor for video recording.

Note: The video quality may be varied with different compressor.

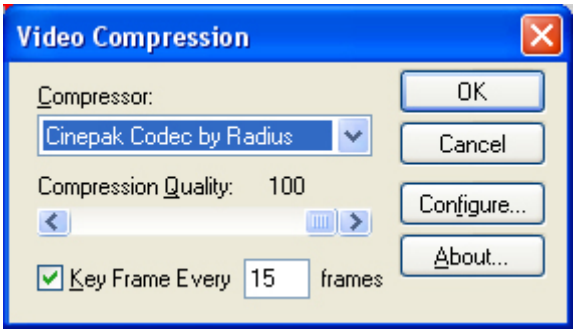

Video Thumbnail Auto-play

The thumbnail auto play can be switched on or Off. If thumbnail auto play is enabled, the video will play when cursor move over.

3. Capture

The picture, video and frame functions in Capture have the same functions as the buttons of in the Tool Bar.

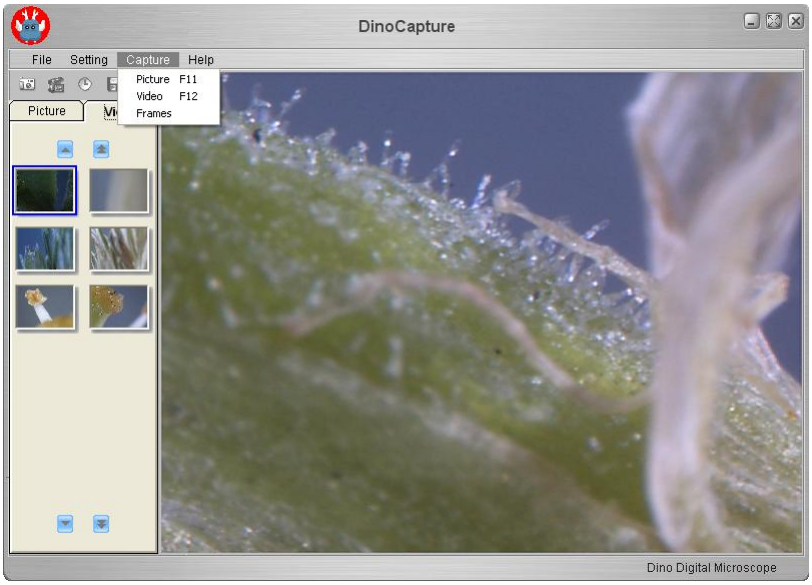

4. Help

User can use “Program Updates” in Help to download the most updated DinoCapture from AnMo web site www.anmo.com.tw

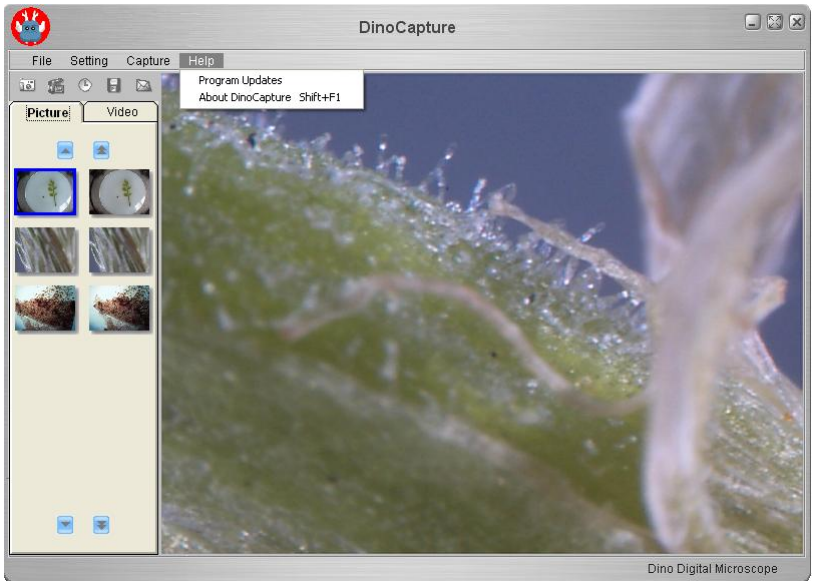

Open The Picture

The saved picture can be displayed in full screen by clicking

To return from full screen mode, just click the mouse left key.

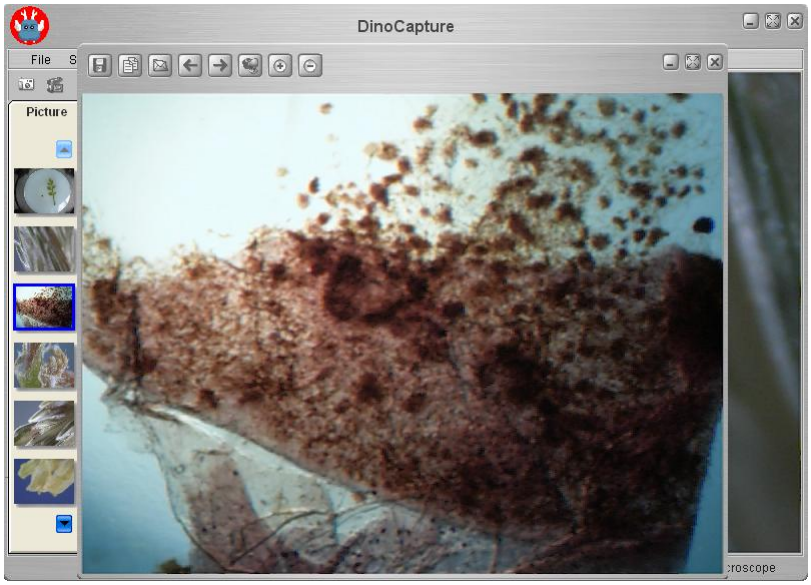

Function Description

Save as

Copy

Mail

Previous Picture

Next Picture

Share the Picture by sending the file to DinoShare under the Shared Document

Enlarge

Shrinkage

Open The Video Or Time Lapsed Video

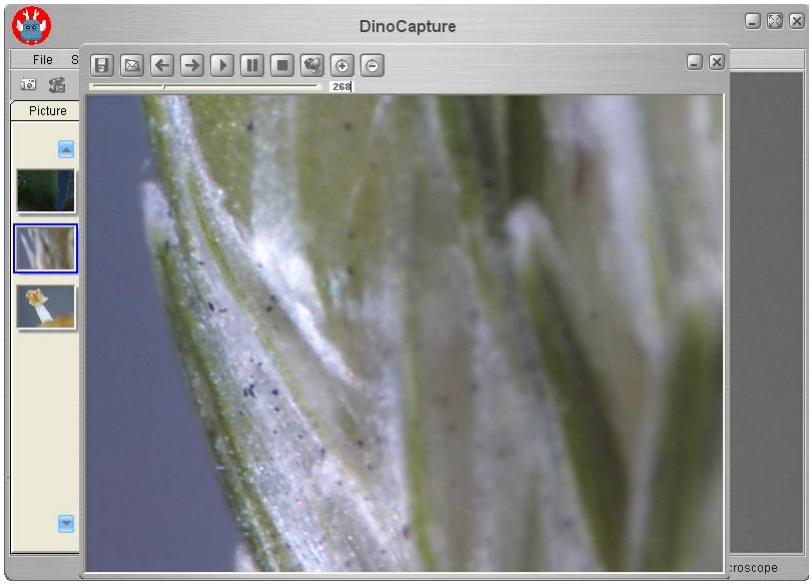

Function Description

Play

Stop

Pause

Using Dino Digital Microscope as PC Camera

Driver installation completed, can use Dino Digital Microscope as PC Camera.

Step.1 Complete driver installation in PC and connect Dino Digital Microscope to PC.

Step.2 Select the normal lens by rotating the lens assembly.

Step.3 Rotate the microscope device along with the device holder counterclockwise as shown.

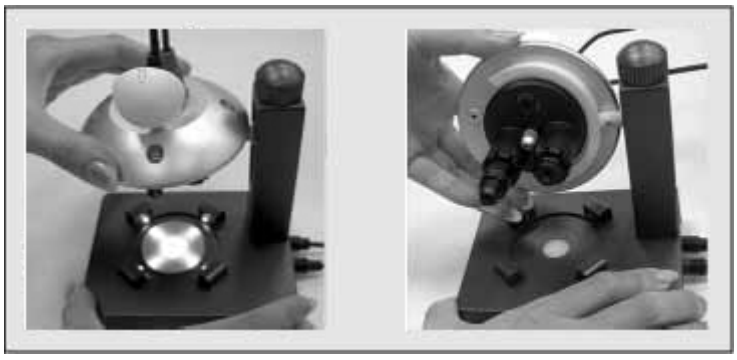

Step.4 Adjust the focus by rotating the normal lens.

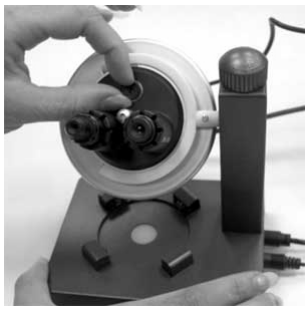

Caution: Please do not remove the lens from the lens assembly, otherwise the dirt may enter the microscope device which might cause the defect on the image.

Q&A

Q1. Why the object cannot be found on the display of digital microscope?

A: a. Please check all the connection of all necessary cable and adapter.
b. When connecting to TV, make sure the TV's channel is correct.
c. Try to switch on LEDs.
d. Check whether the lens assembly is on the right position. If the lens assembly can be freely turned without pulling the lens assembly downward, it means the lens assembly is not on the right position.
e. Recommend to inspect the object from lower power lens.

Q2. Why cannot work, when connect to PC?

A: a. Check driver installation is completed.
b. The USB cable is connected to Dino Microscope and PC USB port.

Q3. How to install driver?

A: a. Do not connect USB cable to Dino Microscope before driver installation.
b. Place installation CD into CD-Rom driver, select "driver installation".

Q4. If USB cable connected to Dino Digital Microscope before driver installation?

A: Remove USB cable from Dino Digital Microscope for 5 sec., and then plug it back to Dino Digital Microscope.

Q5. How to connect "DinoCapture" ?

A: Complete driver installation, connect USB cable to Dino Digital Microscope, and then Execute "DinoCapture" application procedure.

Q6. How to uninstall driver ?

A: Remove USB cable from Dino Digital Microscope, execute "uninstall" in application procedure "Dino Digital Microscope".

Q7. When connecting to PC, why the picture is slow or unsmooth?

A: a. Probably your PC's configuration is not sufficient enough. Please check the system requirements as mentioned in this User's Manual.

b. Probably your PC's CPU or memory is overloaded by executing too many application software. Try to shut down other application and restart your system to release the memory.

c. Probably your system has being attacked by virus, which may dramatically degrade your system's performance.

Q8. What should we do, if Dino Digital Microscope is not working normally?

A: Please reset the system by disconnecting all the cables from Dino Digital Microscope. Wait for about 5 sec., re-connecting the cables to restart.

Q9. Why I can not get an up-right image?

A: Please adjust Dino Digital Microscope's orientation as shown.

up-right image position

Q10. Why Dino Digital Microscope device can not be well fit into the device holder?

A: Device holder can be rotated 360 degrees, please ensure the device holder's screw is faced down as shown.

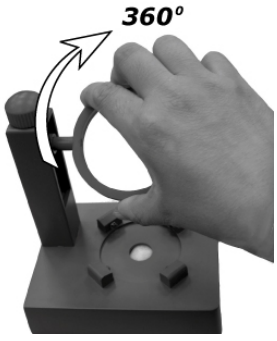

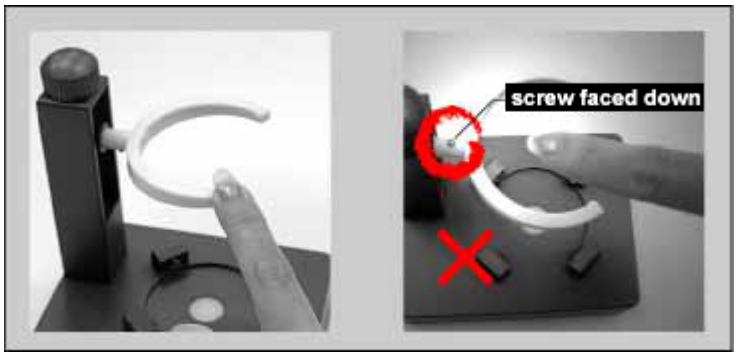

Q11. Why the deep color object hardly can have clear picture under high magnification power lens？

A： a. Check backside and oblique LED are switched on.

b. Since the deep color weaken the light goes into the lens. Suggest to enhance the illumination by using external light source.

c. Make sure Dino Microscope device is properly installed on the device holder.

Q12. Why the image is not clear ?

A: Make sure Dino Microscope's device is properly installed on the device holder.

Q13. Adjust focus adjustment knob, why sometimes the image is not fixed at screen center ?

A: For light weight consideration, Dino Digital Microscope is not designed to be metalized totally. But its construction can meet the requirement of observing the common objects.

Q14. Why the image quality obtained from PC with USB1.1 is different from PC with USB2.0?

A： Due to the transmission rate difference between USB1.1 and USB2.0. Have better image quality, PC with USB2.0 is highly recommended.

Copyright

AnMo Electronics Corp. reserves all patents, trademarks, copyrights, and other intellectual rights regarding the user manual. Copying the manual in part or in full without the written permission of AnMo Electronics Corp. is prohibited. Illegal usage of part or all of the document may result in criminal penalty.

Windows 98se, Windows 2000 and Windows XP are Microsoft company's trademark.

Certification

CE, FCC

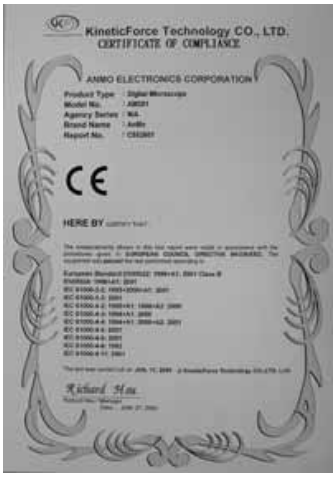
KineticForce Technology CO., LTD.
CERTIFICATE OF COMPLIANCE
ANMO ELECTRONICS CORPORATION
CE
HERE BY

KineticForce Technology CO., LTD.
CERTIFICATE OF COMPLIANCE
ANMO ELECTRONICS CORPORATION
FC
HERE BY

Limited Liability

The manufacturer, importer, and the dealer cannot be held responsible for accidental damage, including personal injury or any other damage, due to inappropriate usage of the product.
Information in the user manual is written for the current specification of the product. The manufacturer of Dino Digital Microscope continues to provide additional functions and apply new technology to it. All specifications may be changed without notice to individual users.